## **Connector block assembly**



## Recommanded




## PICKUP MUST BE SETUP BY A PROFESSIONAL



It will be necessary to watch quite particularly the parallelism of surfaces in contact. The pickup has to, during placement, force enough. Beware to not break the auricle during that operation. If the sensor is too loose and does not force enough, it can be tighten up with a thin piece of wood (or cardboard) on it top

> Sensor orientation *E side string* preferably

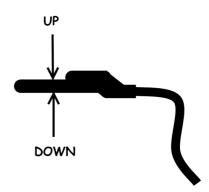

The AMEKA Pickup will work with any preamp system. (a DI Box for example will be fine)

Never pull the cable or handle the sensor by its cable

## INSTALLATION MANUAL

http://www.ameka.fr/support

